

# Electrical panel heater

Adiabatic cooling

Options and accessories

## Electrical panel heater



The default electrical panel is equipped to be installed in ambient temperatures that go down to  $-10^{\circ}\text{C}$ . For climates where the ambient temperature can become even lower, an electrical heater can prevent damage to the internal components inside the electrical panel for ambient temperatures as low as  $-40^{\circ}\text{C}$ .

**Want to install a TVFC in a climate with ambient temperatures as low as  $-40^{\circ}\text{C}$ ?** Contact your [local BAC representative](#).